

Eco-friendly Solutions of Hotel Cosmetics & Dispensers

1, WET+DRY

Deep clean the wall with a wet cloth and use a dry cloth to thoroughly dry it.

2, 10 S

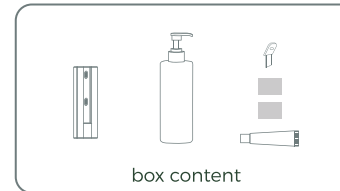
Stick the bracket onto the wall and gently press the entire bracket for 10 seconds.

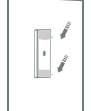





3, 72 H

Avoid any contact or loading onto the bracket for the next 72 hours.

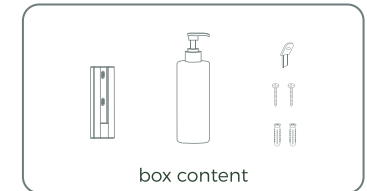
- Do not install the bracket on ceramic tile joints.
- Suitable environmental temperature for installation: 15-38°C (59-100.4°F).
- The adhesives are best-suited for smooth surfaces, e.g., ceramic tiles, glass/metal/plastic panels.
- Screw the bracket onto uneven or matte surfaces instead of using the adhesives.
- Improper installation may cause the bracket to take damage from fall.
- This instruction is only applicable for installation by adhesives.

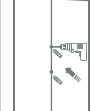
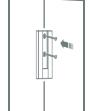

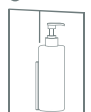
Adhesive type



-  1. Affix two double-sided adhesive tapes to both ends of the bracket's back.
-  2. Apply liquid adhesive to the remaining area on the back of the bracket, following the instructions provided in the diagram.
-  3. Remove the thin film from the surface of the double-sided adhesive.
-  4. Attach the bracket to the wall and press firmly for 10 seconds.
-  5. Wait for 72 hours before using the bracket.
-  6.

Screw type



-  1. Drill two holes at appropriate positions on the wall and insert plastic expansion tubes.
-  2. Align the bracket with the holes on the wall and secure it with two screws.
-  3. The bracket can be used immediately.
-  4.



Wenesty Pump Dispenser Elfin

Easy to install